




SP-008 | SP-008F Power Pack

SA-1-008
Piston
Housing
Assembly

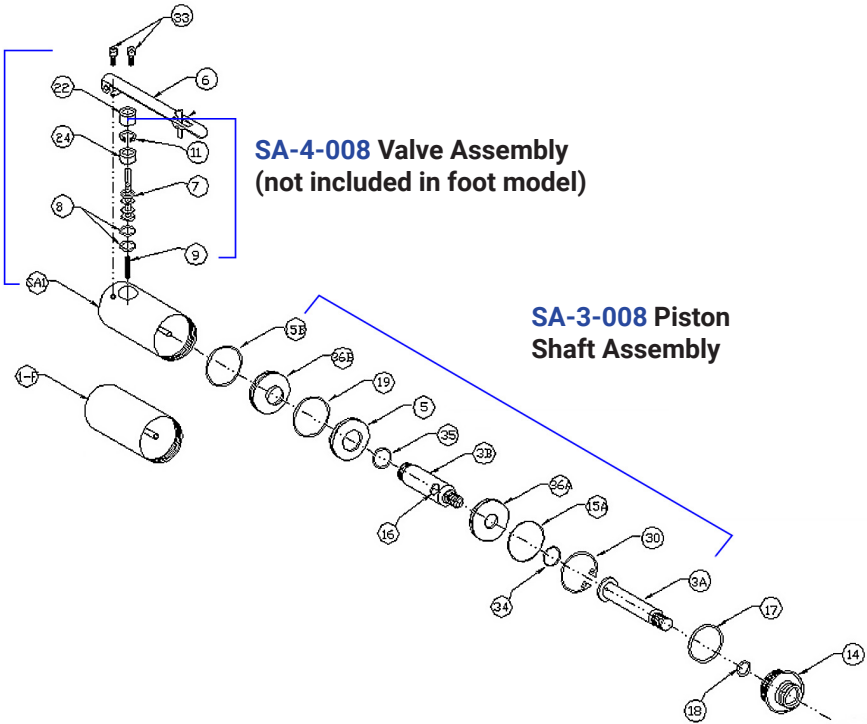

SA-4-008 Valve Assembly
(not included in foot model)

SA-3-008 Piston
Shaft Assembly

SA-1	Piston Housing Assembly	SA-1-008	
1-F	Piston Housing Remote	1-F-008	
3A	Front Piston Shaft	3A-005	
3B	Rear Piston Shaft	3B-005	
5	Cylinder Divider	5-008	
6	Safety Lever Assembly	DA-1	

7	Spool	7-008	1
8	2 Spool O-rings (Kit of 10)	16-003-K10	1
9	Spool Spring	9A-01	1
11	Snap Ring	11-01	1
14	End Cap	14-008	
15A	Front Piston Seal	15A-008	
15B	Rear Piston Seal	15B-008	
16	2 O-rings (Kit of 10)	16-003-K10	
17	O-ring (Kit of 10)	15b-008	
18	O-ring	18-005	
19	O-ring (Kit of 10)	17-008-K10	
22	Valve Spacer	22-02	1
24	Valve Washer	24-008	1
25-H	Hex Cam	25-H	
30	Piston Snap Ring	30-008	
33	2 Screws (Kit of 10)	28-01-K10	
34	Piston Seal	18-08	
35	O-ring (Kit of 10)	35-005-K10	
36A	Front Piston Plate	36A-008	
36B	Rear Piston Plate	36B-008	
	VALVE REPAIR KIT	SA-4-008	

- (1) Included in the valve repair kit.
- Optional Cams available, for use with special tools:
 - 25-C-800, 25-F, 25-S, 25-R, 25-C
 - Two hoses included with FOOT models, one with HAND models.