




SR-100 Snap Ring Tool

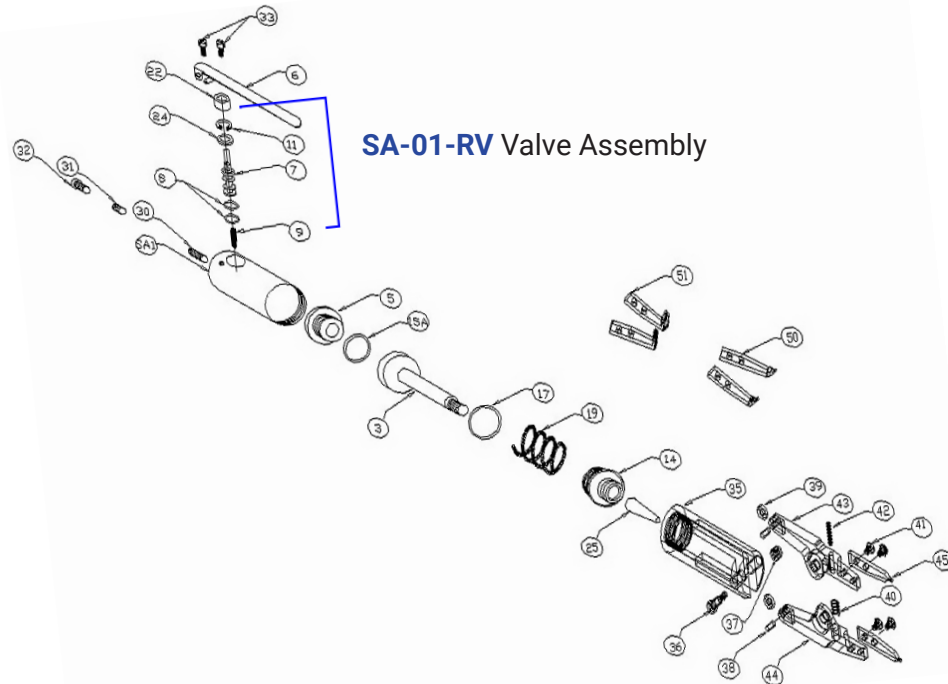

SA-01-RV Valve Assembly

SA-1	Housing, Complete	SA-1-001-SR	
3	Piston Shaft	3-001-SR	
5	Piston Lock Plate	5-01	
6	Safety Lever Assembly	DA-1	
7	Spool	7-01	1
8	Spool O-ring (2 required)	16-003-K10	1
9	Spool Spring	9-01	1
11	Snap Ring	11-01	1
14	End Cap	14-001-SR	

15A	O-ring Piston Seal	15A-01	
17	O-ring	17-01-K10	
19	Return Spring	19-SR	
22	Valve Spacer	22-01	1
24	Valve Washer	24-01	1
25	Cam	25-C-800	
30	Adjusting Screw	30-01	
31	Lock Screw	31-01	
32	Cap Screw	32-01	
33	Screw (2 required)	28-01-K10	
35	Jaw Housing (includes 36 & 37)	SA-2-F	
36	Pivot Screw	23-F	
37	Insert Nut	33-F	
38	Roller Pin (2 required)	3-20-K10	
39	Jaw Roller (2 required)	3-19-453-K2	
40	Spring	40-SR	
41	Mounting Screw (4 required)	41-SR	
42	Adjustment Screw	30-01	
43 & 44	Jaw Set	RRSR-100	
45	Straight Tips	SR-1	
50	45 degree Tips (Optional)	SR-1-45	
51	90 degree Tips (Optional)	SR-1-90	
	O-ring Repair KIT	01-SR-KIT	

(1) Sold as part of a Valve Repair Kit